


## Example Residential Stormwater Pollution Prevention Plan (SWPPP)

Below is an example SWPPP for a new residential construction project. All SWPPP's should include this basic information to obtain a Land Disturbance Permit plus additional BMP's as needed.

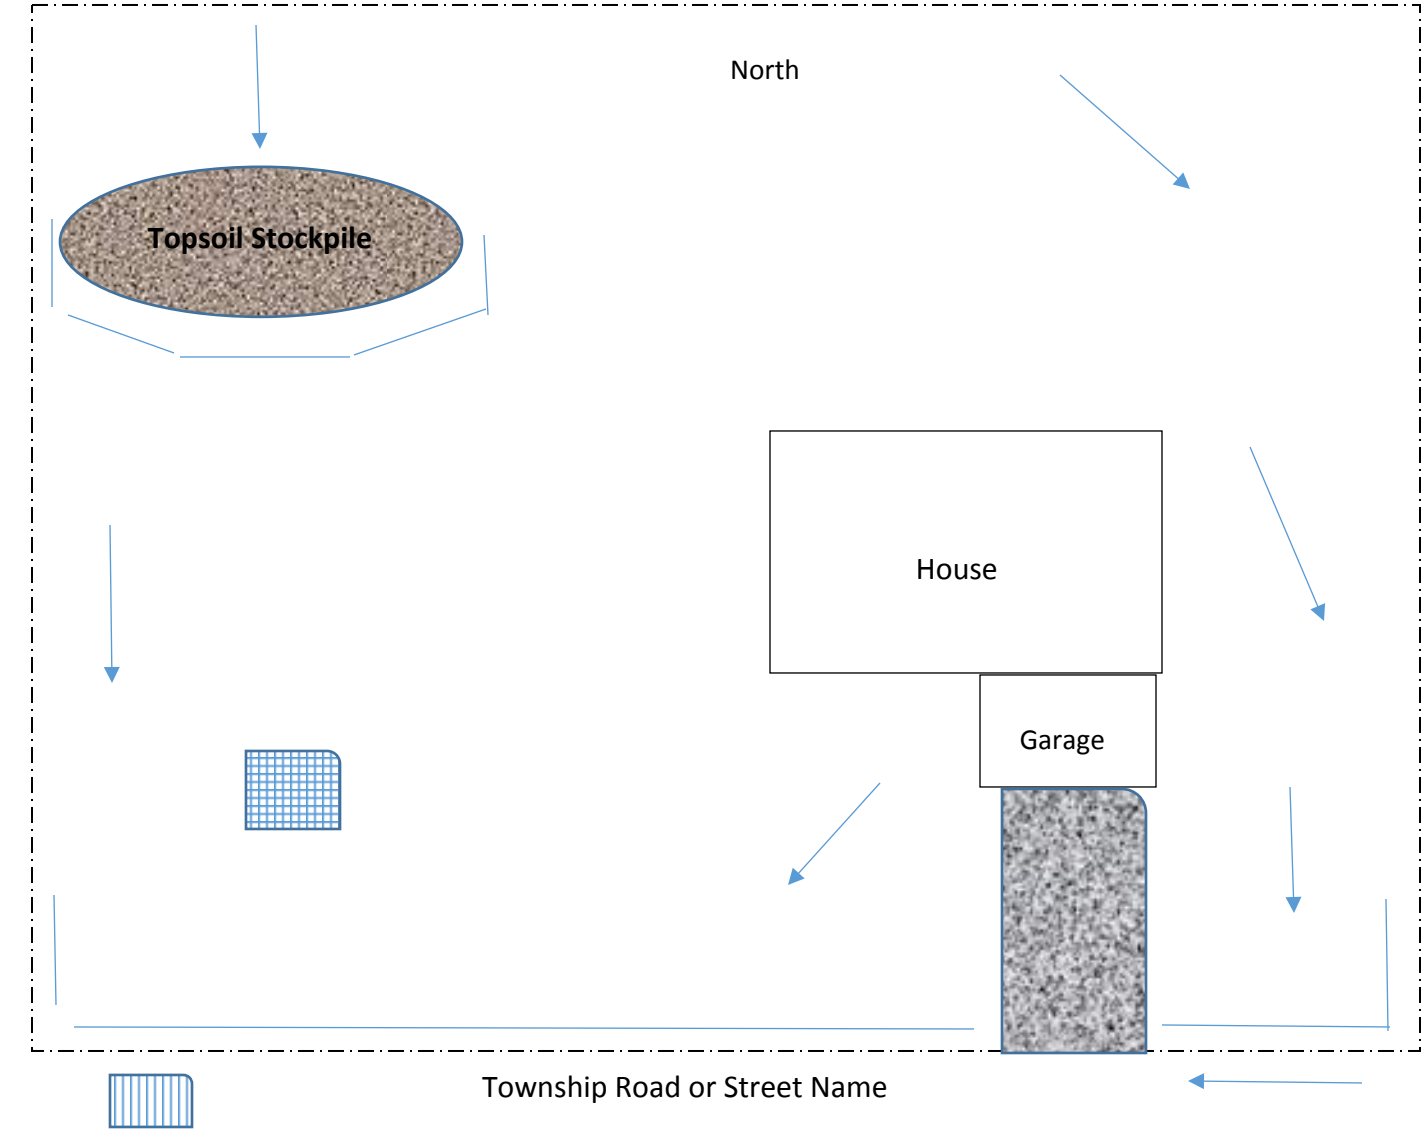

1. Silt fence to protect stockpile and perimeter
2. Inlet protection to protect catch basin (what used?)
3. Rock entrance is 6" deep with filter fabric under liner.
4. Site will be inspected weekly and after each ½ inch rainfall. BMP's will be cleaned and repaired as needed and street sweeping by hand within 24 hours if tracking occurs.
5. A washout pit will be provided for concrete, etc. by digging a small hole with 12" berm and plastic liner.
6. The yard will be sodded within 14 days of final construction.
7. Temporary BMP's will be installed prior to disturbing any soil & removed after sodding.
8. Garbage will be picked up as needed; spills cleaned up.